 


# Ev-D

## USER GUIDE



**WARNING** – Do not look directly at the LEDs or have the local speaker volume turned up to maximum when connecting a battery or switching on.

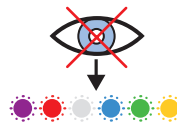 


## 6.0 DAY/NIGHT LED MODES (Default - Night Mode\*)

Selects Day (High) or Night (Medium) LED brightness. Press and hold **PB** until two confirmation tones are heard then release to toggle between Day/Night. Night mode **always** has Night Marking. **Last setting memorised**




### INSTRUCTIONS KEY GUIDE

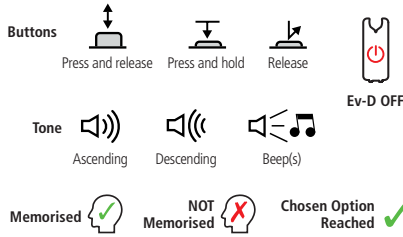

### OPERATION SUMMARY

 
- 1.0 CONTROLS & ATTACHMENTS
- 2.0 FIT BATTERY
- 3.0 SWITCHING ON/OFF
- 4.0 TONE ADJUST
- 5.0 MUTE
- 6.0 DAY/NIGHT LED MODE
- 7.0 WARNINGS & ALERTS
- 8.0 GUARANTEE AND CARE GUIDELINES

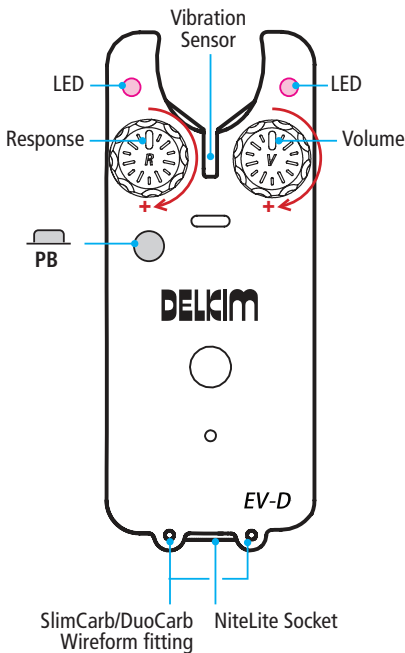

## 2.0 FIT BATTERY


**Do not use rechargeable batteries.** Use a good quality 9v battery such as a Duracell PP3. Completely remove the two screws using the tool provided. Lift off the battery cover. Attach the battery and refit cover. Replace the screws being careful not to over tighten.

 **Note** – When a battery is connected to an Ev-D for the first time it will switch ON automatically into the default settings.\*

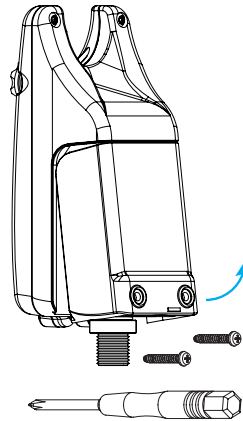


## 3.0 SWITCHING ON/OFF

 Press and hold down **PB** until ascending confirmation tones are heard and immediately release. **DO NOT** keep holding down the button after switch ON or Tone Adjust (see 4.0) will be entered.




 **3.1 SWITCHING OFF** – Press and hold down **PB** until approx. 5 secs) until descending confirmation tones are heard and release.



## 4.0 TONE ADJUST (Default – Medium\*)

 
(Normally carried out before fishing) – First make sure the Ev-D is switched OFF. Switch ON keeping **PB** held down for start up tones. Wait for two confirmation tones and immediately release. To select press and hold **PB** to cycle through the 16 tones. Release and press and hold **PB** again to reverse the direction of tone change. Release **PB** when required tone is reached. To repeat the set tone during adjust mode simply press and release **PB** as often as required. **Tone adjust will automatically time out within 10 seconds from the last PB press. Memorised setting**

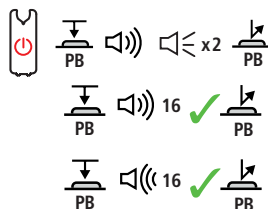

## 5.0 MUTE ON/OFF

Mutes local Ev-D speaker. Press **PB** and release as soon as single confirmation tone is heard. **Do not continue to hold down PB or LED modes will be changed.** Mute will stay ON for 5 minutes with the left hand LED flashing as a visual reminder that it is set after a brief delay. Mute may be cancelled at any time with a single press of **PB**.

 **Not memorised**



## 7.0 WARNINGS & ALERTS

- 7.1 LOW BATTERY** – If the battery becomes low the LEDs will start to dim and the volume will reduce. Replace the battery as soon as possible (see section 2.0). Fit the replacement battery and the Ev-D will switch ON automatically. **Replacing a battery does not affect anything memorised.**
- 7.2 AUTO SWITCH OFF (Power Saving)** – When switched ON if no activity is detected after approximately 60 hours the Ev-D will switch OFF with audible countdown warning tones. During warning period, any activation or **PB** press will extend for another 60 hours.
- 7.3 PB FAILSAFE ABORT** – If **PB** becomes held down continuously by accident the Ev-D will assume a fault state and switch OFF automatically.

## 8.0 GUARANTEE & CARE GUIDELINES

Ev-Ds come with a 2 year guarantee as standard (3 years with registration). Ev-Ds do not need servicing. Look after them and they will look after you.

- After use in rain clean and store upright in a warm place to dry with the hard cases removed.
- If an Ev-D becomes immersed in water, switch OFF; remove the battery and shake out any water. Store in a warm place to totally dry out.
- Tampering with any screws other than to remove the battery door or treating with any substance **particularly WD40** will invalidate any guarantee.

Full terms and conditions of our guarantee, registration, after sales care and best practice can be found on our website. [www.delkim.co.uk](http://www.delkim.co.uk)

### EXTENDED 3 YEAR WARRANTY REGISTRATION

All Delkim products come with a 2 year guarantee as standard but we do offer an extended 3 year warranty if you register online.

You will need to follow the instructions and provide your proof of purchase. The extended warranty starts from the date of purchase not the date of registration.

To register go to [www.delkim.co.uk/registration](http://www.delkim.co.uk/registration)

The EU Declaration of Conformity for the Ev-D can be viewed on our website [www.delkim.co.uk/DOC](http://www.delkim.co.uk/DOC)

## OPERATING INSTRUCTIONS

### 1.0 CONTROLS & ATTACHMENTS

- 1.1 VIBRATION SENSOR**
- 1.2 PUSH BUTTON – PB. Important** – Button presses are acknowledged by various intuitive confirmation tones and LED flashes.
- 1.3 RESPONSE CONTROL (R)** – Previously known as sensitivity. Turn clockwise to increase the response of the vibration sensor to line movement.
- 1.4 VOLUME CONTROL (V)** – Turn clockwise to increase level.
- 1.5 NITELITE SOCKET** – Allows attachment of Delkim illuminated visual indicators. **Note** - if not to be used leave coloured bung in place.
- 1.6 SLIMCARB/DUOCARB ATTACHMENT** – Two small holes at the base of the Ev-D allows attachment of wireform.



Delkim Ltd., P.O. Box 270, Bedford, England MK43 7DZ  
Tel. +44 (0) 1234 721116  
Fax +44 (0) 1234 721148  
[www.delkim.co.uk](http://www.delkim.co.uk)



DOWNLOAD OUR APP

