 




IMPORTANT




All EV-R Presentation Sets come with the alarms already paired to the receiver. If you have bought a single alarm to add to your set, see receiver pairing instructions.



WARNING - Do not look directly at the LEDs or have the local speaker volume turned up to maximum when connecting a battery or switching ON.



FIT BATTERY - Do NOT use rechargeable batteries. Use a good quality 9 volt battery such as a Duracell PP3. REMOVE the two screws using the tool provided and remove battery door.

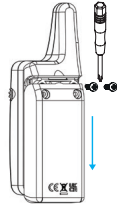

LOW BATTERY CHECK - The battery is tested at switch ON and after each activation, if it is found to be low the alarm gives a distinctive double tone warning. Replace the battery as soon as possible.

Replacing a battery does not affect memorised settings.

Note - Low battery warnings are also transmitted to

the receiver. This is indicated by the LED flashing on the receiver to indicate the alarm that has the low battery.

To maximise battery life keep the receiver at least half a metre away from all electrical devices including battery packs. Replacing a battery does not affect memorised settings or pairing.

EV-R ALARM INSTRUCTIONS CONTROLS & ATTACHMENTS

VIBRATION SENSOR.

PUSH BUTTONS - PB.

RESPONSE CONTROL (R) - Turn clockwise to increase the RESPONSE (sensitivity).

VOLUME CONTROL (V) - Turn clockwise to increase level.

ILLUMINATED HANGER SOCKET - Allows attachment of Delkim illuminated indicators.

WIREFORM FITTING - Two small holes on front of the alarm allows fitting of the wireform for hanger arms.

THE EV-R ALARM FEATURES:

• **VIBRATION RESPONSE** - Controls the ability of the alarm to sense line movement and vibrations.

• **MUTE** - Mutes alarm speaker.

• **MULTI COLOURED LEDs** - Can be set to 6 different colours




• **NIGHT MARKING** - LEDs glow at low level constantly in Night Mode.

• **HIGH VOLUME SPEAKER WITH 8 TONES.**

• **ANTI-THEFT SECURITY** - Sends alert to your EV-R receiver when alarm is turned OFF.

• **LOW BATTERY CHECK** - The battery condition is tested, if it is found to be low it gives a warning.

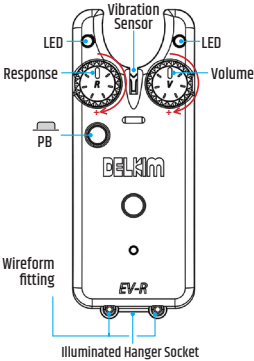

EV-R RECEIVER INSTRUCTIONS CONTROLS

PUSH BUTTON - PB.

VOLUME CONTROL (V) - Turn clockwise to increase level.


THE RECEIVER FEATURES:

• **AUTO SYNC MULTI COLOURED LEDs** - Automatically syncs with the colour set on the EV-R alarm.

• **EASY PAIRING** - Comes paired to your EV-R alarms and can pair with up to 4 alarms in total.

• **ANTI-THEFT SECURITY ALARM** - Security Alarm will sound when triggered by the EV-R alarm.

• **LOW BATTERY CHECK** - The battery condition is tested, if it is found to be low it gives a warning.

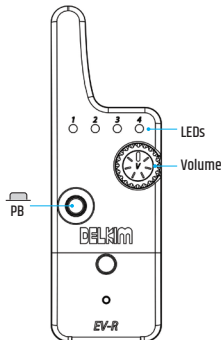

RECEIVER USER SETTINGS

ALL ADJUST MODES will automatically time out after 16 seconds or 8 seconds from the last PB press and settings will be MEMORISED.

1.0 SWITCHING ON/OFF - Hold down PB 2-3 secs until confirmation tones are heard and release.

2.0 ANTI-THEFT SECURITY ALARM - The Security Alarm will sound continuously for 20 seconds when triggered by the EV-R alarm being switched OFF. If triggered press PB anytime to abort.

ANTI-THEFT ON/OFF (Default ON).

- Turn receiver ON and continue to hold PB until you get 2 beeps and LEDs flash multi colours.
- Press PB to toggle between ON/OFF.

Note - Please make sure you are not fishing in an area that needs security before disabling this feature. To avoid accidental triggering always switch receiver OFF before alarms.

PAIRING AND MEMORY CLEAR SETTINGS

All EV-R Presentation Sets come with all alarms paired to the receiver. If you wish to add additional or remove existing alarm then follow the steps in below.

3.0 PAIRING MODE - Allows alarms to be paired.

Additional alarms can also be added too without the need to clear the memory.

- Turn receiver ON and continue to hold PB until you get 3 beeps and LEDs flash.
- Press PB again and receiver will skip over any paired channels and flashes the first available channel.
- Activate the alarm and when it is paired correctly the receiver LEDs will flash with a confirmation tone.
- Next available channel will start flashing.
- Select a different channel at any time by pressing PB.
- Once you have finished pairing press PB to skip over unused channels and confirm pairing.

Note - An alarm can not be paired into more than one channel. You can not pair to a channel that has already been paired. To use a channel that has already been paired you must do a MEMCLEAR see below. The receiver will automatically pick up the colour of the alarm once pairing is complete.

4.0 MEMCLEAR - Clears receiver memory to pair to a channel previously used or to correct any pairing errors.

- Turn receiver ON and continue to hold PB until you get 3 beeps and LEDs flash.
- Press and hold PB until the receiver switches OFF.
- Receiver will then restart in PAIRING MODE see above.

ALARM USER SETTINGS

ALL ADJUST MODES will automatically time out after 16 seconds or 8 seconds from the last PB press and settings will be MEMORISED.

1.0 SWITCHING ON/OFF - Hold down PB until confirmation tones are heard and release. Every time the alarm is turned OFF it will always send a signal to the receiver and trigger the Security Alarm that will sound continuously for 20 seconds. (To turn OFF security see section on EV-R receiver instructions).

2.0 MUTE - MUTES alarm speaker only and continues for 5 minutes and left hand LED will flash until it times out.

• Press and Release PB to toggle ON/OFF.

3.0 RESPONSE CONTROL (R) - The RESPONSE setting controls the ability of the alarm to sense line movements, as RESPONSE is increased, less movement is required before a beep occurs.

• Turn clockwise to increase RESPONSE.

IMPORTANT - Line doesn't always need to move to get a beep, it can also vibrate and still activate the alarm. For a full explanation of setting RESPONSE visit - www.delkim.co.uk

4.0 LED COLOUR MODE - User can select COLOUR

(Default COLOUR).

- Turn ON alarm and Hold PB until you get 2 beeps.
- Press PB to cycle through the 6 COLOURS.
- Release PB when required COLOUR is reached.

5.0 TONE ADJUST

- Turn ON alarm and Hold PB until you get 3 beeps then Release.
- Press and Hold PB to cycle through the 8 TONES.
- Release and Press and Hold PB again to reverse direction of TONE.
- Release PB when required TONE is reached.
- To repeat a TONE during adjust mode Press and Release PB.

CARE GUIDELINES

Delkim products do not need servicing. Here are some general guidelines to prolong the life of our products:

- After use in rain clean and store upright in a warm place to dry with the hard cases removed.
- If an item becomes immersed in water, switch OFF, remove the battery and shake out any water. Store upright in a warm place to totally dry out.

- Clean PBs and Controls regularly with a toothbrush to stop dirt build up and maintain operation.
- Tampering with any screws other than to remove the battery door or treating with any substance particularly WD40 will invalidate any warranty.

For bite-sized video instructions, registration and more download the Delkim app.

EXTENDED 4 YEAR WARRANTY REGISTRATION

All Delkim products have a 2 year warranty as standard but we offer an extended 4 year warranty with registration. To register use the app or visit www.delkim.co.uk/registration

The EU Declaration of Conformity for the EV-R alarm and receiver can be viewed on our website www.delkim.co.uk/DCC Full terms and conditions of our warranty, registration, after sales care and best practice can be found on our website. www.delkim.co.uk